

AD91.60-P-4000A	Airbag (AB) diagnosis fault memory	2.12.96
-----------------	------------------------------------	---------

MODEL 124.### (except 124.230 /290 /226 /393 /330) 1# as of 1.7.93

except CODE (291b) Airbag for driver and front passenger (for front passenger only if driver's airbag standard)

except CODE (491) U.S. version

MODEL 129 as of 1.7.93

MODEL 140 as of 1.7.93

MODEL 202 as of 1.7.93

MODEL 170

MODEL 208

MODEL 210 up to 31.5.98

MODEL 210 as of 1.6.98 up to 30.6.99

except CODE (290) Windowbag

except CODE (293) Left and right rear sidebag

except CODE (491) U.S. version

except CODE (498) Japanese version

⚠ Danger!	Risk of injury during test and repair work on airbag units or emergency tensioning retractor units	Store airbag units with the outlet area upwards and do not expose to temperatures above 100°C. Interrupt the power supply when working on these units.	AS91.00-Z-0001-01A
(*)	For retrofitted components the cables must only be routed at a distance from the sensor cables.		
i	As of 07/93 the fault memory can only be read out and erased using the Hand-Held Tester (HHT)		
	Airbag, diagnosis, previous knowledge		AD91.60-P-2000A
	Note, diagnosis, fault memory, airbag		AD91.60-P-2000-05A
	Note on fault frequency, operating time		AD91.60-P-2000-13A
a	Fuses in order		
b	Battery voltage 11-14 V		
c	Airbag indicator and warning lamp SRS (A1e15) illuminates in instrument cluster		
d	Connect Hand-Held-Tester (HHT), read or fault memory		AD00.00-P-2000-03A
e	Determine the MB number of the airbag control module using the Hand-Held-Tester	<p>i For control modules starting with 000 fault code 1 applies.</p> <p>i For control modules starting with 001 fault code 2 applies.</p>	
	Fault memory		
Fault code1	Fault code 2	Fault text	Possible cause / Note
001	001	ETR control module with airbag (N2/2)	AD91.60-P-6000-02A
002	004	Driver airbag squib (R12/3)	AD91.60-P-6000-03A AD91.60-P-6000-03B
003	005	Driver ETR squib (R12/1)	AD91.60-P-6000-05A AD91.60-P-6000-05B
004	006	Front passenger ETR squib (R12/2)	AD91.60-P-6000-07A AD91.60-P-6000-07B
005	007	Front passenger AB squib (R12/8)	AD91.60-P-6000-09A AD91.60-P-6000-09B
	008	Driver side airbag squib (R12/9)	AD91.60-P-6000-17A AD91.60-P-6000-51B
	009	Front passenger side airbag squib (R12/10)	AD91.60-P-6000-18A AD91.60-P-6000-52B
010	004-009 016, 017 026, 029 034	Programming does not correspond to the vehicle equipment	Check vehicle equipment repeat programming AD91.60-P-2000-11A
011	003	Voltage supply, undervoltage, circuit 15R	AD91.60-P-6000-01A
019	002	Airbag indicator and warning lamp (A1e15)	AD91.60-P-6000-11A
020	025	Front passenger seat occupied recognition sensor (left/right) (B41,B41/1)	AD91.60-P-6000-21A
024	016	Left front seat belt buckle switch with AB and ETR (S68/3)	AD91.60-P-6000-12A

025	017	Right front seat buckle switch with AB and ETR (S68/4)		AD91.60-P-6000-14A
013		Short-circuit ignition circuits (1) together		AD91.60-P-6000-16A
018		Left front side airbag sensor (A53) cable fault	with code 292	AD91.60-P-6000-51B
019		Left front side airbag sensor (A53) sensor defective	with code 292	Replace sensor
020		Left front side airbag sensor (A53) sensor defective	with code 292	Replace sensor
021		Right front side airbag (A54) sensor defective	with code 292	AD91.60-P-6000-52B
022		Right front side airbag (A54) sensor defective	with code 292	Replace sensor
023		Right front side airbag (A54) sensor defective	with code 292	Replace sensor
027		Front passenger seat occupied recognition sensor with automatic child seat recognition (ACSR) (B48) Communication, -//-		AD91.60-P-6000-22A
028		Front passenger seat occupied recognition sensor with automatic child seat recognition (B48), Child seat incorrectly positioned or defective, transfer between seat and child seat	Metallic objects on front passenger or child seat. Powerful transmitter, phone or similar, which are temporarily in the vicinity.	Position child seat correctly or replace Replace B48
031		Front passenger seat occupied recognition sensor with automatic child seat recognition (B48)		Replace B48
032		Left front side airbag sensor (A53) communication fault	with code 292	Check electromagnetic compatibility (EMC) and cable routing for retrofitted components
033		Right front side airbag sensor (A54) communication fault	with code 292	Check electromagnetic compatibility (EMC) and cable routing for retrofitted components
034		Digital crash output, cable fault (TELE AID)	MODEL170	
035		Analogue crash output, cable fault	MODEL 170	