



01-006 Removal and installation of noise capsule at bottom of engine compartment

---

Model 124

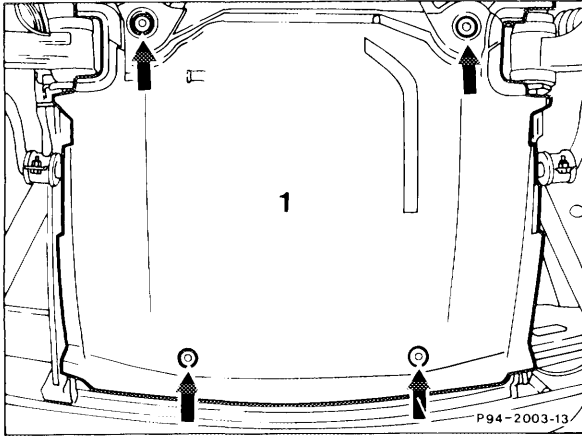


Noise capsule at bottom of engine compartment, front (1)

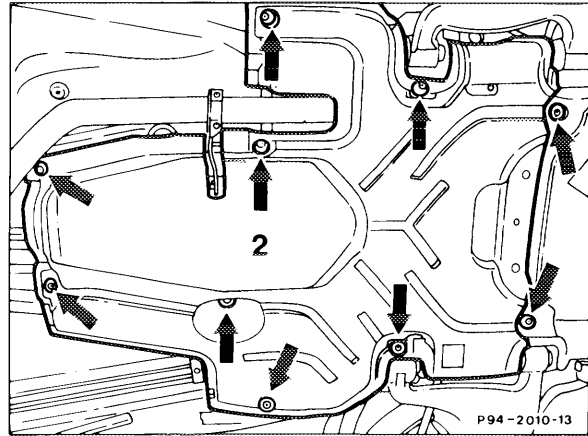


Noise capsule at bottom of engine compartment, rear (2)

Model 126

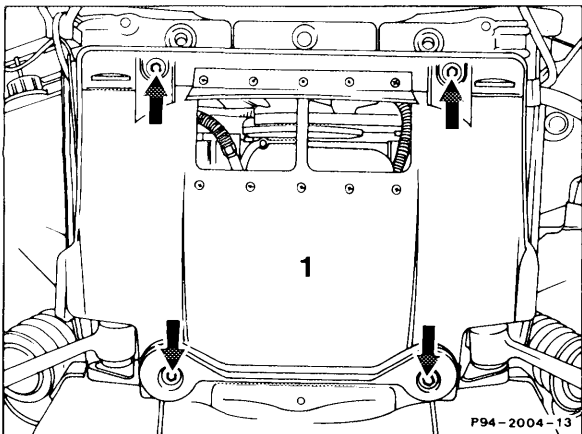


Noise capsule at bottom of engine compartment, front (1)

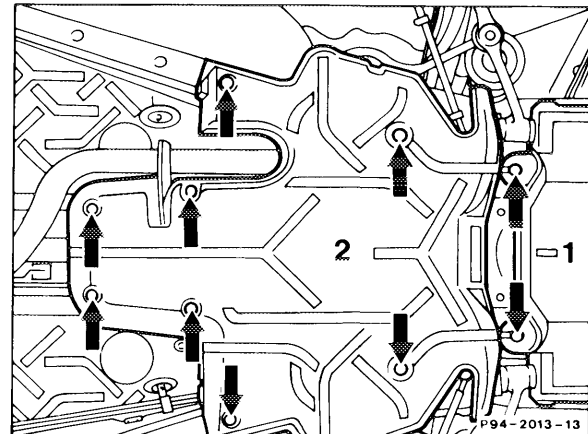


Noise capsule at bottom of engine compartment, rear (2)

Model 201

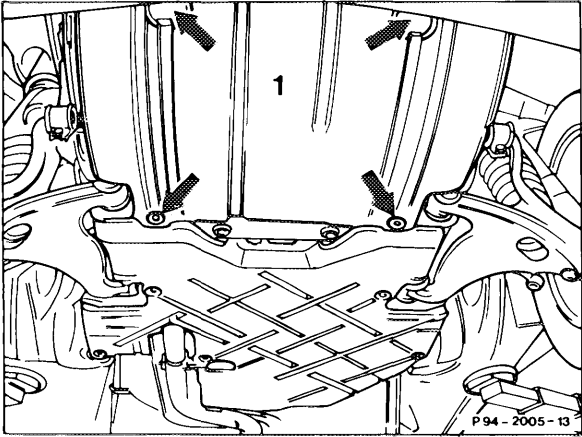

Noise capsule at bottom of engine compartment, front (1)

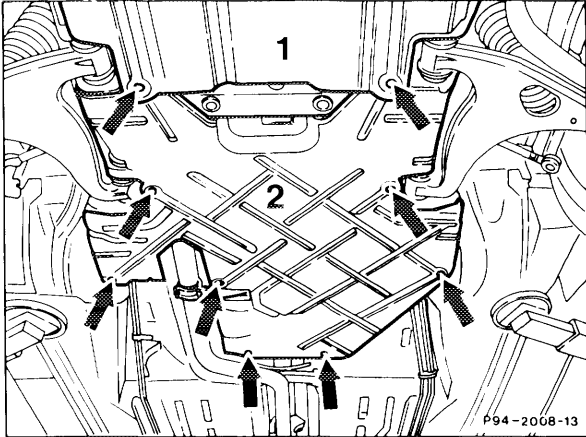

Noise capsule at bottom of engine compartment, rear (2)

Noise capsule, front and rear (1, 2) . . . . .

Remove sheet metal screws (arrows), reinstall and remove capsule, install.

**Note**  
Install engine compartment capsule so that edges of side part of capsule engage in bottom part of capsule.