


## 07.1-160 Testing vacuum pump

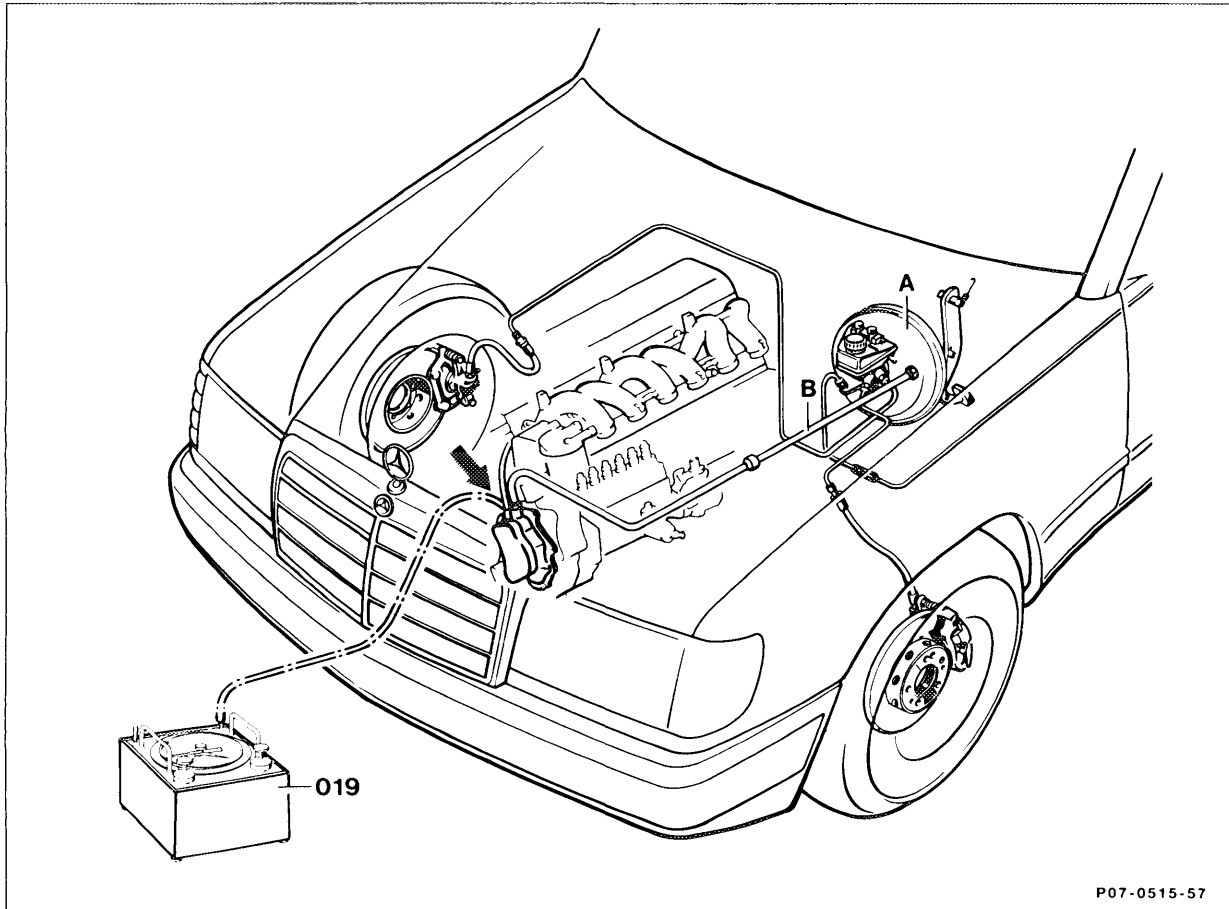

Engine temperature .....	< 20 °C (reference value)
Main vacuum line (B) .....	disconnect from brake booster (A), ventilate and reconnect.
Vacuum line on auxiliary user connection .....	disconnect and check choke orifice with 0.8 mm gauge for open passage.
Vacuum tester (019) to auxiliary user connection .....	connect and check vacuum at idle speed.
	<b>Nominal value:</b> 700 mbar after 30 s.
	If the vacuum value is not achieved, replace vacuum pump.