


## 07.1-210 Replacing delivery valve seal

---

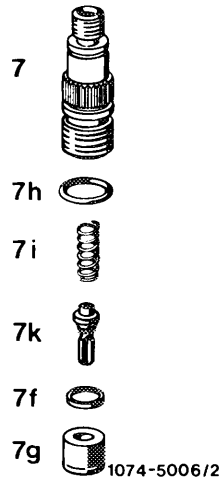

Air cleaner complete . . . . .	remove, reinstall (09-400).
Delivery valve holder (7) . . . . .	remove, reinstall, tightening torque 35 Nm, special tool 617 589 01 09 00.
Compression spring (7i)	
Copper sealing ring (7f) . . . . .	replace.
Delivery valve (7k) . . . . .	rinse in fuel before installation.
Delivery valve carrier (7g) . . . . .	observe installation position.
O-ring (7h) . . . . .	lubricate prior to installation.

### Special tool

