


## 07.1-235 Removal and installation of fuel pump - Turbodiesel

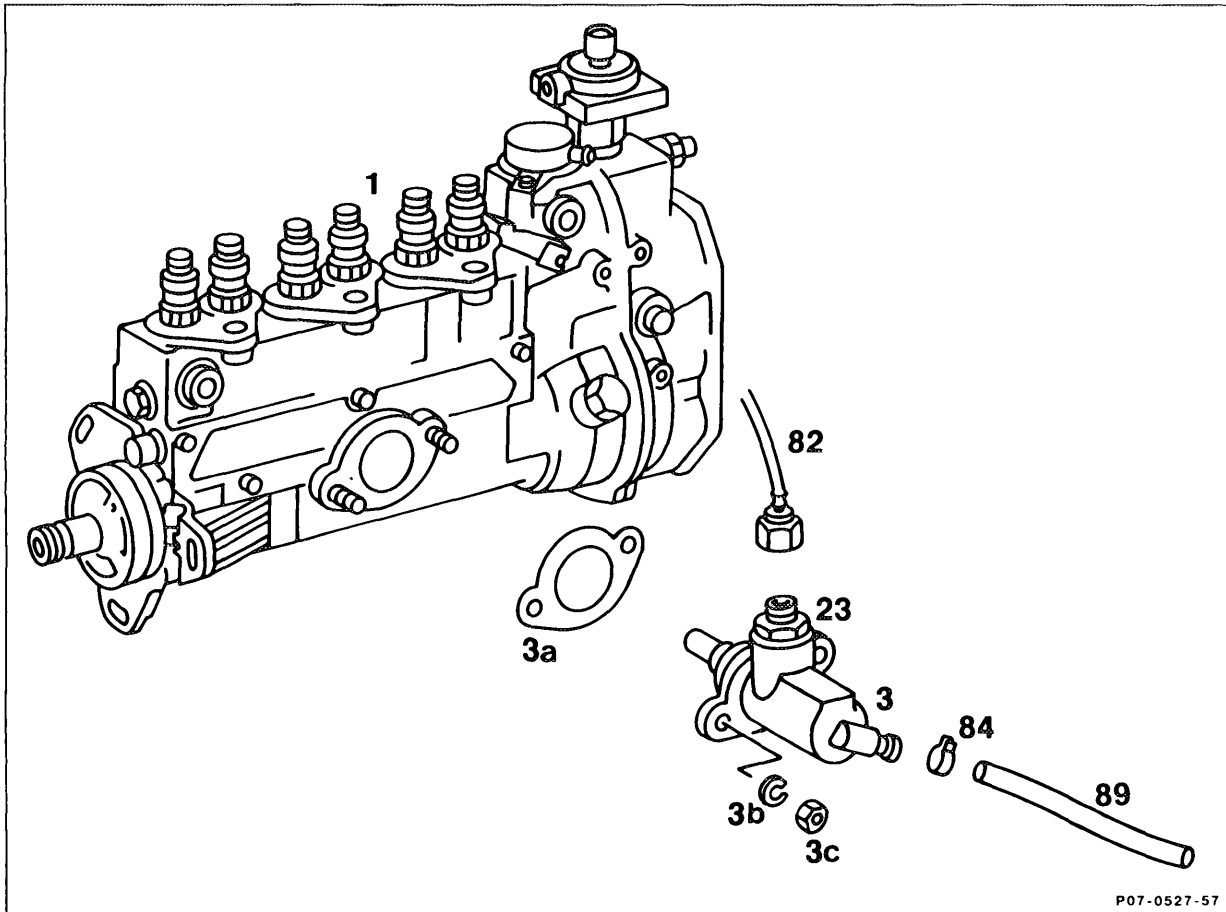

Clip (84) .....	open, close.
Suction line (89) .....	detach, fit on.
Fuel filter inlet (82) .....	disconnect and connect.
Nuts (3c) .....	remove, install.
Washers (3b) .....	remove, install.
Fuel pump (3) .....	remove, install, collect engine oil flowing out during removal.
Gasket (3a) .....	replace.
Inlet connector (23) .....	remove, install when replacing the fuel pump.