


22-215 Removal and installation of front engine stop

Preceding work:
Bottom engine compartment lining removed (01-006).

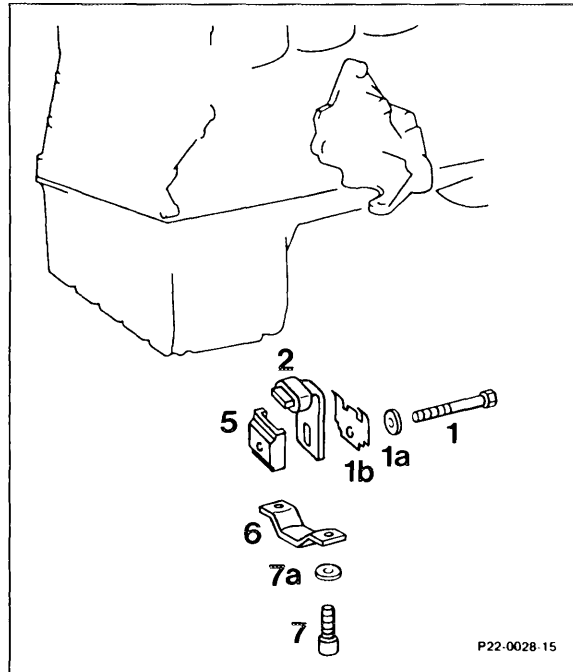

Adjusting bolt (1) unbolt, bolt in, 130 Nm.

Note

Adjust engine stop (22-220).

Hexagon socket bolts (7) unbolt, bolt in, 25 Nm.

Bracket (6) and engine stop (2) remove, attach.

Tightening torques

	Nm
Hexagon socket bolts, engine stop bracket	25
Adjusting bolt	130

Special tools

