


## 30-335 Lubrication of accelerator control linkage and control shafts

---

- After each engine wash, lubricate all bearing points of all control shafts, control levers, joints of accelerator control linkage with an oil can.
- The Bowden cable is maintenance-free and does not need to be lubricated.

Version with manual transmission

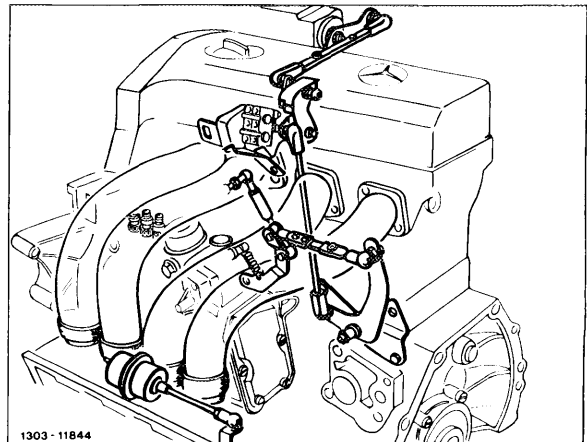


- Only the following hydraulic oils may be used:

Castrol DB Hydraulic Fluid  
Mobil Aero HFA  
Shell Aero Fluid 4

- When performing assembly work on accelerator control linkage, use anti-corrosion grease 594 M 3 (make: Pfinder) Part No. 000 989 87 51 10.
- Examine accelerator control shafts, control levers, relay levers, ball sockets, Bowden cable and accelerator control linkage for ease of movement and wear.

Version with automatic transmission

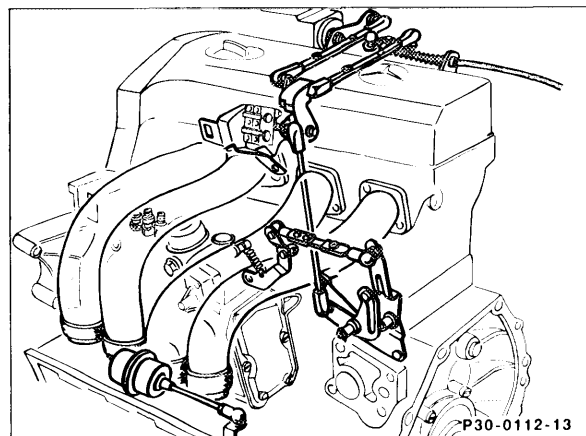

**Note**

The friction damper (arrow) must not be lubricated.

Arrangement on manual transmission with support and friction damper

