

A2	Radio	5A
A2F1	Fuse in Radio	9A
A28	Antenna (radio, CB, telephone)	10M
A35	CTEL transmitter-receiver	6M
B6	Hall-effect speed sensor	7M
F1	Fuse and relay box	
F1-3	Fuse 3, circuit 58R	5L
F1-9	Fuse 9, circuit 30	5L
F1-C	Fuse C, circuit 30	8L
H4/7	Left rear speaker	3M
H4/7x1	Left rear speaker connector	3L
H4/8	Right rear speaker	3M
H4/8x1	Right rear speaker connector	3L
H4/9	Left front speaker	1M
H4/9x1	Left front speaker connector	1L
H4/10	Right front speaker	2M
H4/10x1	Right front speaker connector	2L
M11	Automatic antenna (radio/telephone) (USA)	9M
W6	Ground (left wheelhousing in trunk)	
W18	Ground (left front seat crossmember)	
W31	Ground strap (antenna)	
	Grounds not indicated, components are connected on engine block or bodywork	
X1/4	Automatic antenna connector	8G
X1/8	Taillamp harness, radio/sound system connector	4E
X2/2	VSS connector (radio) (2-pole)	6E
X53/5	Hall-effect sensor multipoint connector (VSS)	6G

<p>Cross Section of Wire may differ from Values shown in Wiring Diagram. Changes in Cross Section of Wire will be shown framed.</p>
<p>Explanations and Notes of Wiring Diagram see Section 00-A Locations/Connections/Overview see Section 00-B/00-C</p>

