

E10/3	Right air outlet illumination	7M	N57	Convenience control module (power windows, sliding/pop-up roof)	21M	W6	Ground (left wheelhousing in trunk)	
E15/3	Rear dome lamp	11M				W12	Ground (center console)	
E17/5	Left rear entrance/exit lamp	10M	S2/1	Ignition/starter switch	31M	W14	Ground (ABS hydraulic unit bracket)	
E17/6	Right rear entrance/exit lamp	8M	S8/2	Warning buzzer contact (exterior lamps/central locking system)	13M		Grounds not indicated, components are connected on engine block or bodywork	
E18/1	Trunk lamp	12M	S8/2x1	Warning buzzer contact connector (exterior lamps/central locking system)	13K	X4	Terminal block (terminal 30, fuse and relay box) (2-pole)	31H
E33	Anti-theft alarm condition indicator	1M	S9	Stop lamp switch	2M	X4/10	Terminal block (terminal 30/terminal 61 battery) (3-pole)	31F
F1	Fuse and relay box		S9/1	Stop lamp switch (ASD/ASR)	2M	X20	Stop lamp switch connector (2-pole)	2L
F1-B	Fuse B, terminal 15	34L	S16/3	Starter lock-out/backup lamp switch (transmission range recognition)	28M	X26	Interior/engine connector (12-pole)	30H
F1-C	Fuse C, terminal 30	17L 34L	S17/3	Left front door switch	5M	X27	Starter harness connector	29H
F1-1	Fuse 1, terminal 15R	17L	S17/4	Right front door switch	7M	X30	Accessory equipment connector block	18M 36M
F1-3	Fuse 3, terminal 58R	26L	S17/5	Left rear door switch	9M	X42	Anti-theft alarm connector (front/rear)	9F 26E
F1-5	Fuse 5, terminal 15	3L	S17/6	Right rear door switch	9M	X42/1	Anti-theft alarm diode holder	9F
F1-8	Fuse 8, terminal 58L	26L	S17/8	Trunk lamp switch	12M	X42/2	Right rear door contact switch/dome lamp connector (ATA) (1-pole)	10H
F1-11	Fuse 11, terminal 15T	27L	S18/1	Rear dome lamp switch (with illumination)	10M	X42/7	Right front door contact switch connector (ATA)	6H
F1-12	Fuse 12, terminal 15X	27L	S47	Left front door actuator	15M	X42/13	Anti-theft alarm contact connector (radio) (1-pole)	7F
F1-14	Fuse 14, terminal 56b	27L	S48	Right front door actuator	14M	X42/14	Anti-theft alarm connector (trunk lamp)	12F
H3	Alarm horn	37M	S49	Trunk lid lock actuator	16M	X43	Anti-theft alarm connector (central locking system) (3-pole)	19H
K5	Power seat relay module (USA)	6M	S62	Hood switch (ATA)	37M	X49/2	Backup lamp/starter lock-out switch connector	28H
K24	Convenience relay module	4M	S62/1	Left front door switch (ATA)	24M	Z7/16	Terminal 30 connector sleeve (accessory equipment connector block)	15H
K38	Starter lock-out relay module (ATA)	32M	S62/1x1	Left front door switch connector (ATA)	23K			
M1	Starter	29M	S62/2	Right front door switch (ATA)	25M			
M14/2	Supply pump (central locking system/orthopedic backrest)	19M	S62/2x1	Right front door switch connector (ATA)	25K			
N2/4	Seat belt/keys/lights warning module (USA)	5M	S88/2	Trunk lid lock switch (convenience)	23M			
N3/1	LH sequential multiport fuel injection control module	30M	S88/2x1	Trunk lid lock switch connector (convenience)	23K			
N7	Exterior lamp failure monitoring module	3M	W1	Main ground (behind instrument cluster)				
N26	Anti-theft alarm control module	18A						

124.82-5.00	Anti-Theft Alarm System (ATA), Engine 119 LH-SFI	As of M.Y.1993	Page 2 of 2
-------------	--	----------------	-------------

Cross Section of Wire may differ from Values shown in Wiring Diagram. Changes in Cross Section of Wire will be shown framed.

Explanations and Notes of Wiring Diagram see Section 00-A
Locations/Connections/Overview see Section 00-B/00-C





