


14-7305 Removing and installing air pump switchover valve

Preceding work:

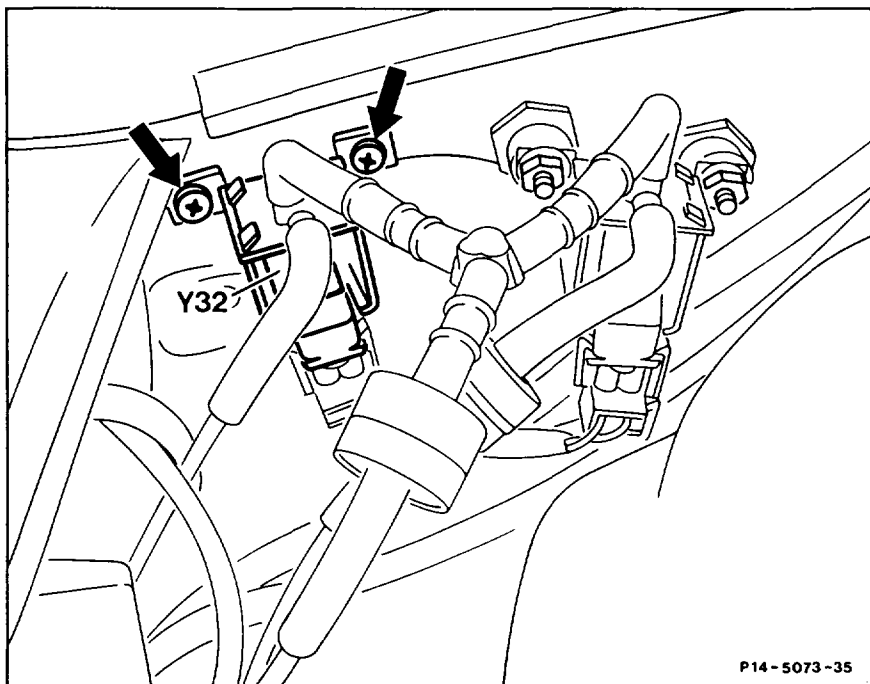

Operation no. of operation texts and work units or standard texts and flat rates:
14-7305.

Models 124, 201 basic and national version (CH) (DK) (N) (S) (SF) **as of 1991,**
Models 124, 126, 201 national version (J) (USA) **as of 1990,**
Model 129



Model 124 (J) (USA)

Component compartment cover	remove, install (only model 129).
Electrical coupling	at air pump switchover valve (Y32), unplug, plug in.
Vacuum hose (tr/vi/bl)	pull off, fit on.
	Installation note
	Pay attention to colour coding on vacuum hose (see function diagram air injection).
Vacuum hose for non-return valve	pull off, fit on.
Screws (arrows)	remove, insert.
Air pump switchover valve (Y32)	at carrier, detach, attach.

KE control unit fault memory (only models 124,
126, 201   as of model year 1990) read, erase if necessary.

Note

Stored faults which may originate from disconnected cables or simulation when performing test work, must be erased in the fault memory after completing all work.

Tasks, components, function description see function of emissions control system (see Repair Instructions Function description KE Injection System Combustion II, 14-0030).