


H2	AR47.10-P-7000EA	Removing and installing fuel gauge sender	27.7.94
-----------	------------------	--------------------------------------------------	----------------

MODEL 124

- 48/1 Cap
- 48/2 O-ring
- 48/3 O-ring
- 51 Fuel filler cap
- B4 Fuel gauge sender
- Arrow Fuel gauge sender coupling

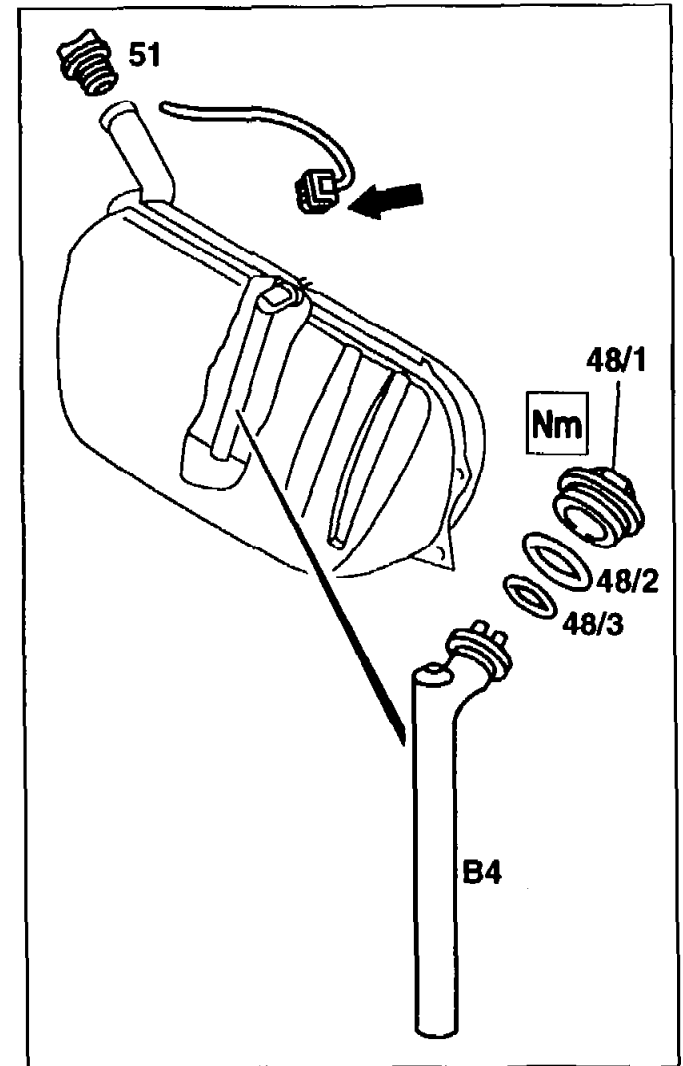



	Removal, installation		
	Risk of explosion	Pay attention to accident prevention regulations!	
	If fuel tank is full, pump out about 8 liters of fuel		
1	Remove trim for fuel tank in trunk	see Repair Instructions Body Removal and Installation Operations I Model 124 Op. no. 68-480	
2	Unplug coupling (arrow) for fuel gauge sender (B4)	Secure electric cable to prevent it slipping off	
3	Unbolt sealing flange (48/1) and fuel gauge sender (B4), respectively		BA47.10-P-1003-01B
4	Take out fuel gauge sender (B4)		
5	Install in the reverse order		
6	Replace O-rings (48/2, 48/3)	Oil to facilitate installation	

Fuel tank

Number	Designation	Model 124.034/ 036/06
BA47.10-P-1003-01B	Sealing flange and fuel gauge sender to fuel tank	Nm 40