




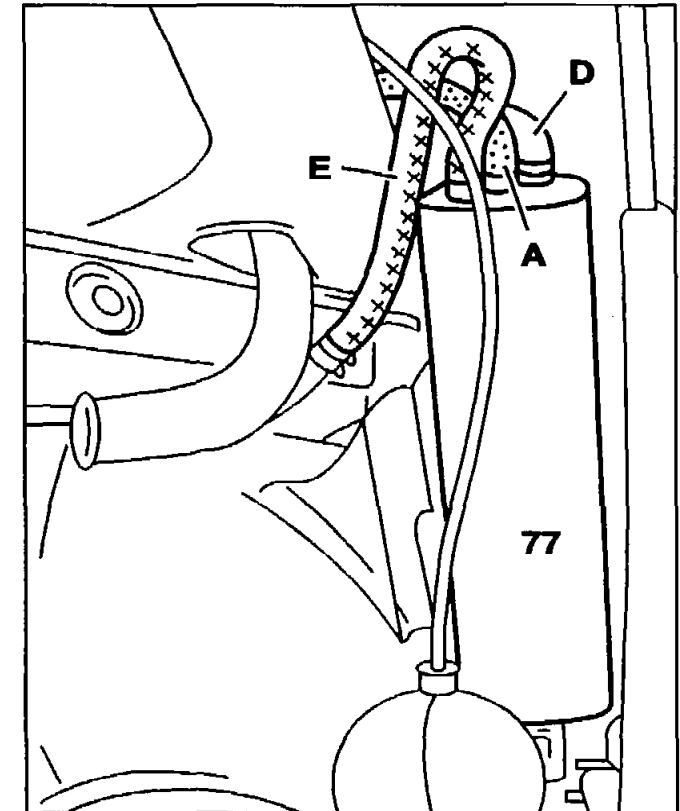


L4	AR47.30-P-8212EA	Removing and installing activated charcoal canister	11.8.94
-----------	------------------	--	----------------

MODEL 124 with ENGINE 119

- A Activated charcoal canister – purge control valve pipe
- D Vent valve – activated charcoal filter pipe
- E Vent pipe
- 77 Activated charcoal canister



P47.30-0266-02

 	Removal, installation		
	Risk of explosion	Observe accident prevention regulations!	
1	Remove front left inner fender		

2	Disconnect pipes at activated charcoal canister (77) Connecting diagram of evaporative emission control system	Pipes (A, D, E) Engine 119.97	AR47.30-P-8212-01EA D16
3	Remove activated charcoal canister (77)	Release upward	
4	Install in the reverse order		