



N4


AR47.30-P-8212FA

Removing and installing activated charcoal canister

27.7.94

MODEL 129 with ENGINE 119, 120

- A Activated charcoal canister – purge control valve pipe
- D Vent valve – activated charcoal filter pipe
- E Vent pipe
- 77 Activated charcoal canister

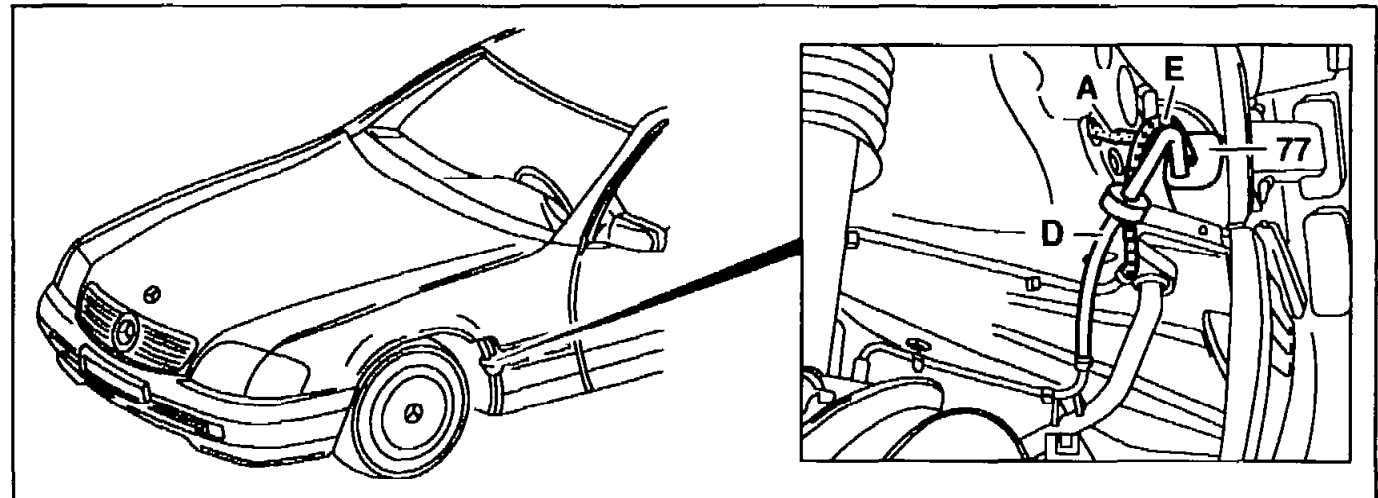

P47.30-0245-04

	Removal, installation		
	Risk of explosion	Observe accident prevention regulations!	
1	Remove front left inner fender		RA88-130
2	Disconnect pipes at activated charcoal canister (77) Connection diagram of evaporative emission control system	Pipes (A, D, E) Engine 119.97 Engine 119.98	AR47.30-P-8212-01EA D16 AR47.30-P-8212-01EB G16

		Engine 120.980/981	AR47.30-P-8212-01FA	K16
		Engine 120.982/983	AR47.30-P-8212-01FB	N16
3	Remove activated charcoal canister (77)	Release upward		
4	Install in the reverse order			