

<b>G18</b>	ÄH00.00-X-1000Z	<b>Modification note</b>	<b>28.6.99</b>
------------	-----------------	--------------------------	----------------

**Newly included**

Measuring oil consumption	AR18.00-P-0025B	<b>B1</b>
Removing and installing engine oil cooler	AR18.30-P-1000A	<b>H3</b>
Removing and installing dipstick guide tube	AR18.40-P-3510HA	<b>H4</b>
Removing and installing radiator	AR20.20-P-3865HB	<b>F8</b>

**Revisions**

Removing and installing oil pressure relief valve	Oil pump with press-fitted oil pump drive gear	AR18.10-P-5031HA	<b>G2</b>
Removing and installing oil pump	Oil pump with press-fitted oil pump drive gear	AR18.10-P-6020HA	<b>L2</b>