
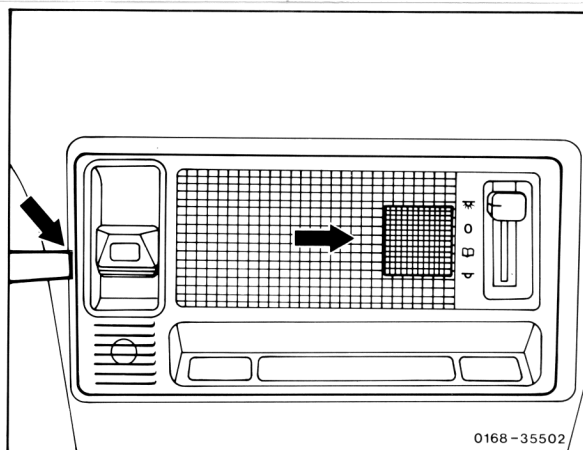
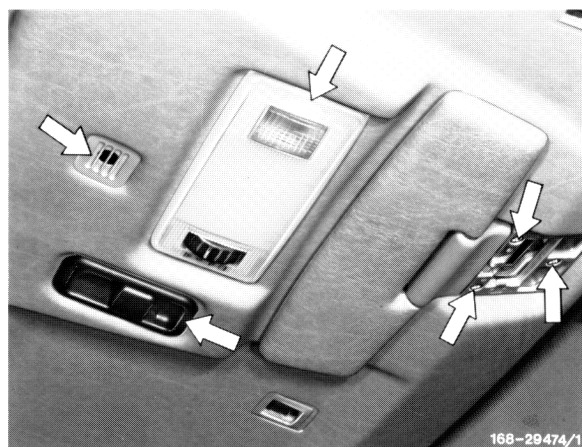


Removal


- 1 Remove sun visor left and right.
- 2 Disengage inside mirror.
- 3 Unscrew holding plate for inside mirror, force off dome lamp, sun roof switch and cover above inside temperature sensor (1st version).
- 4 Pull off electrical connections.
- 5 Push complete roof operating unit toward the right and out of trim by means of plastic wedge. Pull off plug, remove roof operating unit (2nd version).

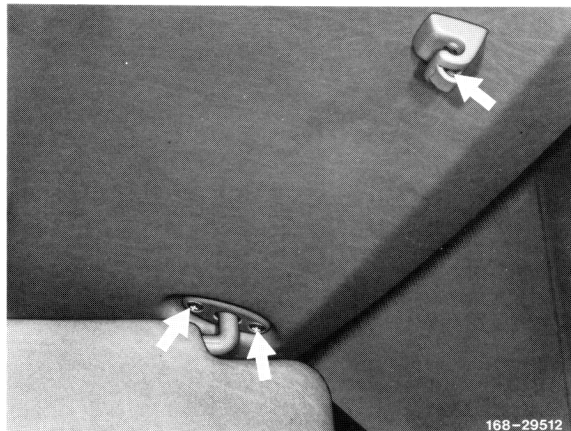

6 Unscrew chrome-plated strip on sun roof cutout.

7 Pull off chafing strip at left and right in range of roof frame trim.

8 Pull trim on roof frame out of lateral reveal moldings toward the rear and remove.

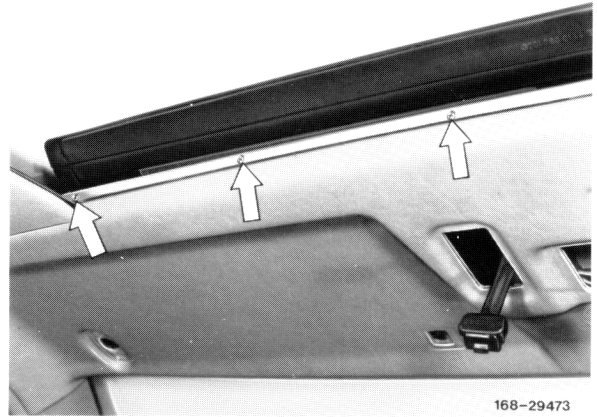

Installation

9 Introduce lateral holder under reveal molding left and right.

10 For further installation proceed vice versa.

