

Connections of 15-pole plug (instrument cluster)


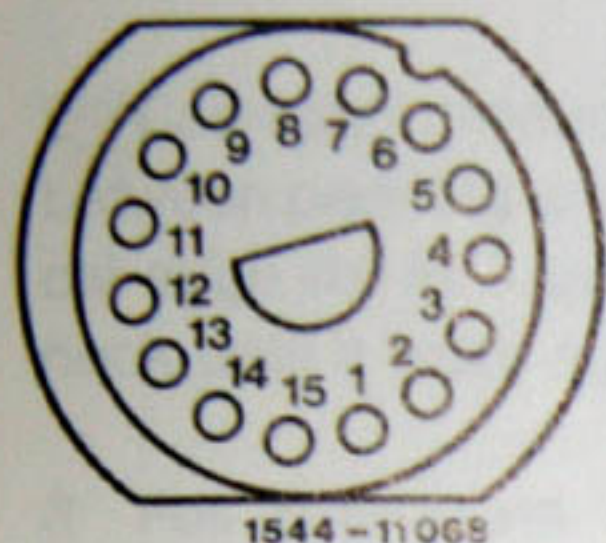


Fig. 54/15

No.	Designation	Wire cross section (mm ²)	Wire color code
1	Ground W 1	0.5	brown
2	Coolant temperature sensor	0.5	green
3	Immersion tube transmitter fuel gauge	0.5	blue/black
4	Immersion tube transmitter fuel reserve indicator	0.5	blue/green
5	Low engine oil level indicator switch	0.5	brown/black
6	Fuse 5, circuit 15	0.5	black/red/purple
7	High beam indicator lamp	0.5	white
8	Circuit 15 fusebox (unfused)	0.5	pink/red
9	Charge indicator, circuit 61	0.5	blue
10	Contact sensor brake lining wear indicator, left	0.5	brown/red
10	Contact sensor brake lining wear indicator, right	0.5	brown/red
11	Low brake fluid/parking brake switch	0.5	brown/white
12	Low coolant level indicator switch	0.5	brown/yellow
13	Lamp failure monitor unit, terminal K	0.5	grey/purple
13	Warning buzzer	0.5	grey/purple
14	Left turn signal (flasher) indicator	0.5	black/white
15	Right turn signal (flasher) indicator	0.5	black/green

Connections on 4-pole plug (instrument cluster)

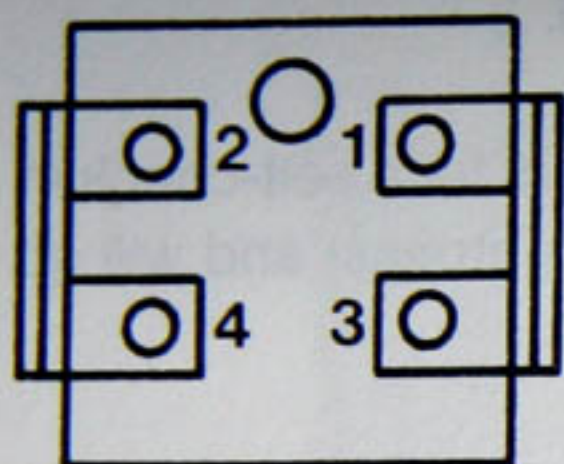

1544-12239

Fig. 54/16

No.	Designation	Wire cross section (mm ²)	Wire color code
1	Switch, low windshield washer fluid level	0.75	brown/blue
2	Terminal block, circuit 58 d	0.75	grey/blue
3	Not used		
4	Oil pressure sensor	0.75	brown/green