


A. Sedan and T-sedan


Removal

- 1 Pull off chafe strip in range of reveal molding.
- 2 Position plastic wedge on clips and knock against plastic wedge with ball of thumb.
- 3 Slip reveal molding out of roof frame trim and remove.

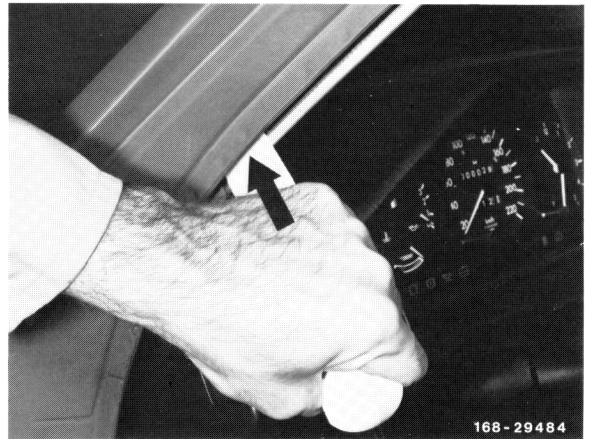


Installation

- 4 Align clips on reveal molding.
- 5 For further installation proceed vice versa.

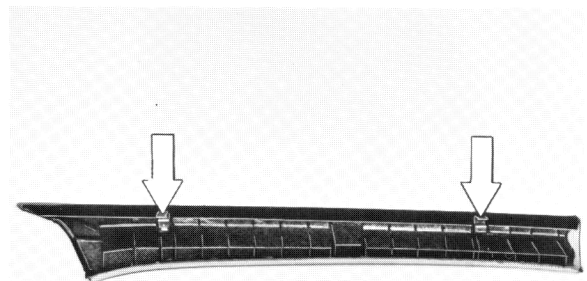

B. Convertible

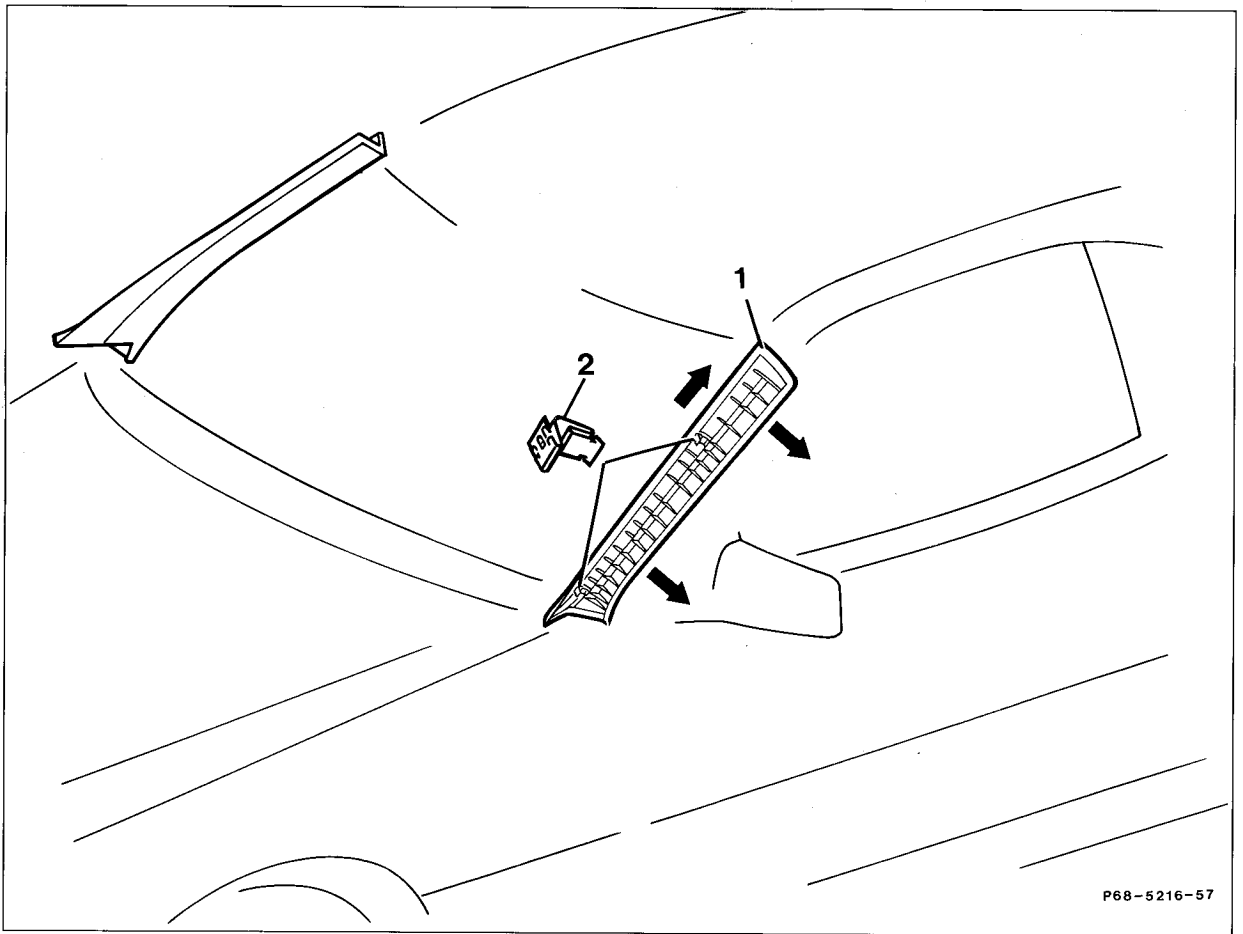

Chafe strip	remove, install.
Panel (1)	push upward (arrow).
Panel (1)	push off at clips (2) with screwdriver in direction of arrows, press on.

Installation note

Before installing press clip (2) into panel (1).