


07.1-160 Testing vacuum pump - Turbodiesel

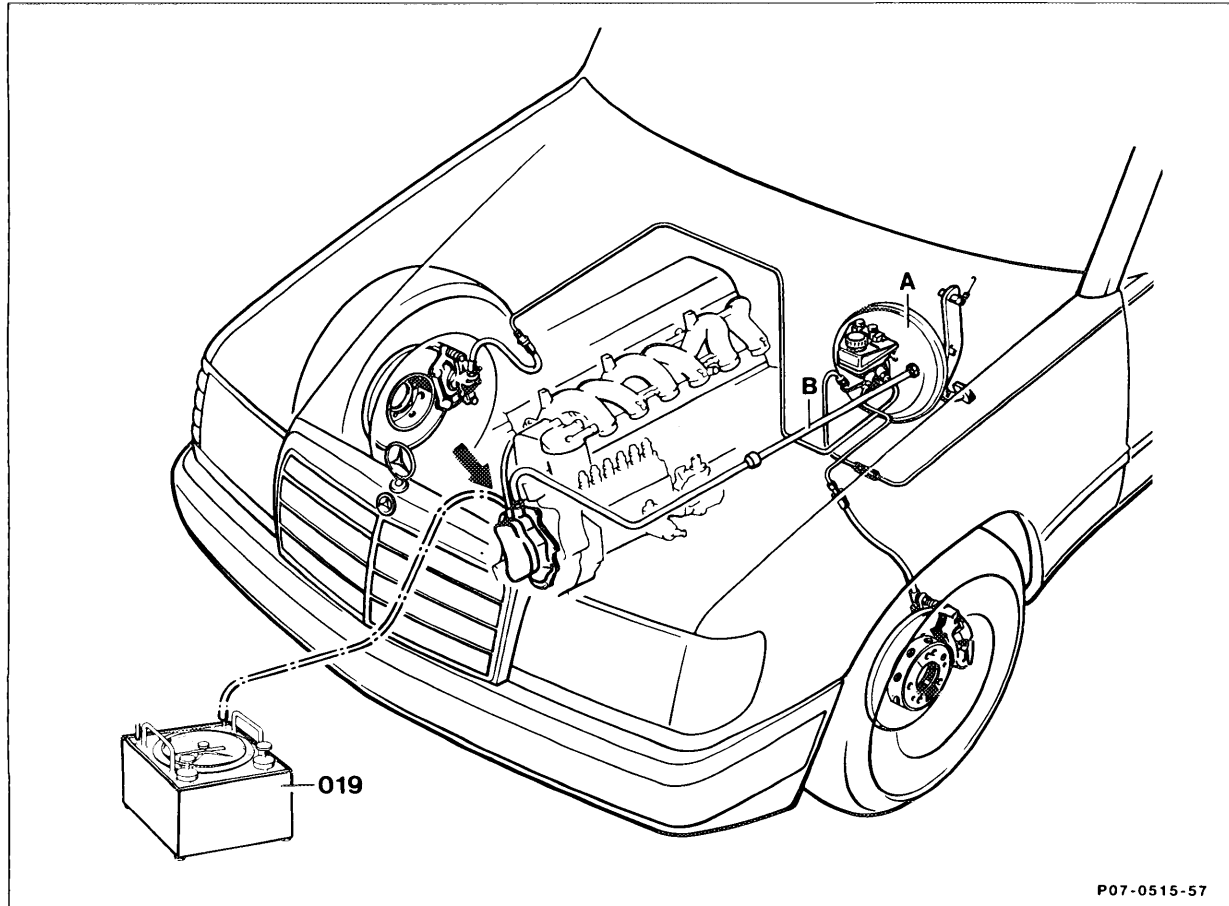

P07-0515-57

- | | |
|---|--|
| Main vacuum line (B) | disconnect at brake booster (A). |
| Vacuum line at ancillaries connection | detach, and use 0.8 mm gauge to check that restriction orifice is clear. |
| Vacuum tester (019) 201 589 13 21 00 | connect to ancillaries connection and test vacuum at idle speed. |

Specification: 700 mbar after 30 s.

If specified vacuum reading is not reached
replace vacuum pump.