


30-325 Removal, adjustment and Installation of Bowden cable -Turbodiesel

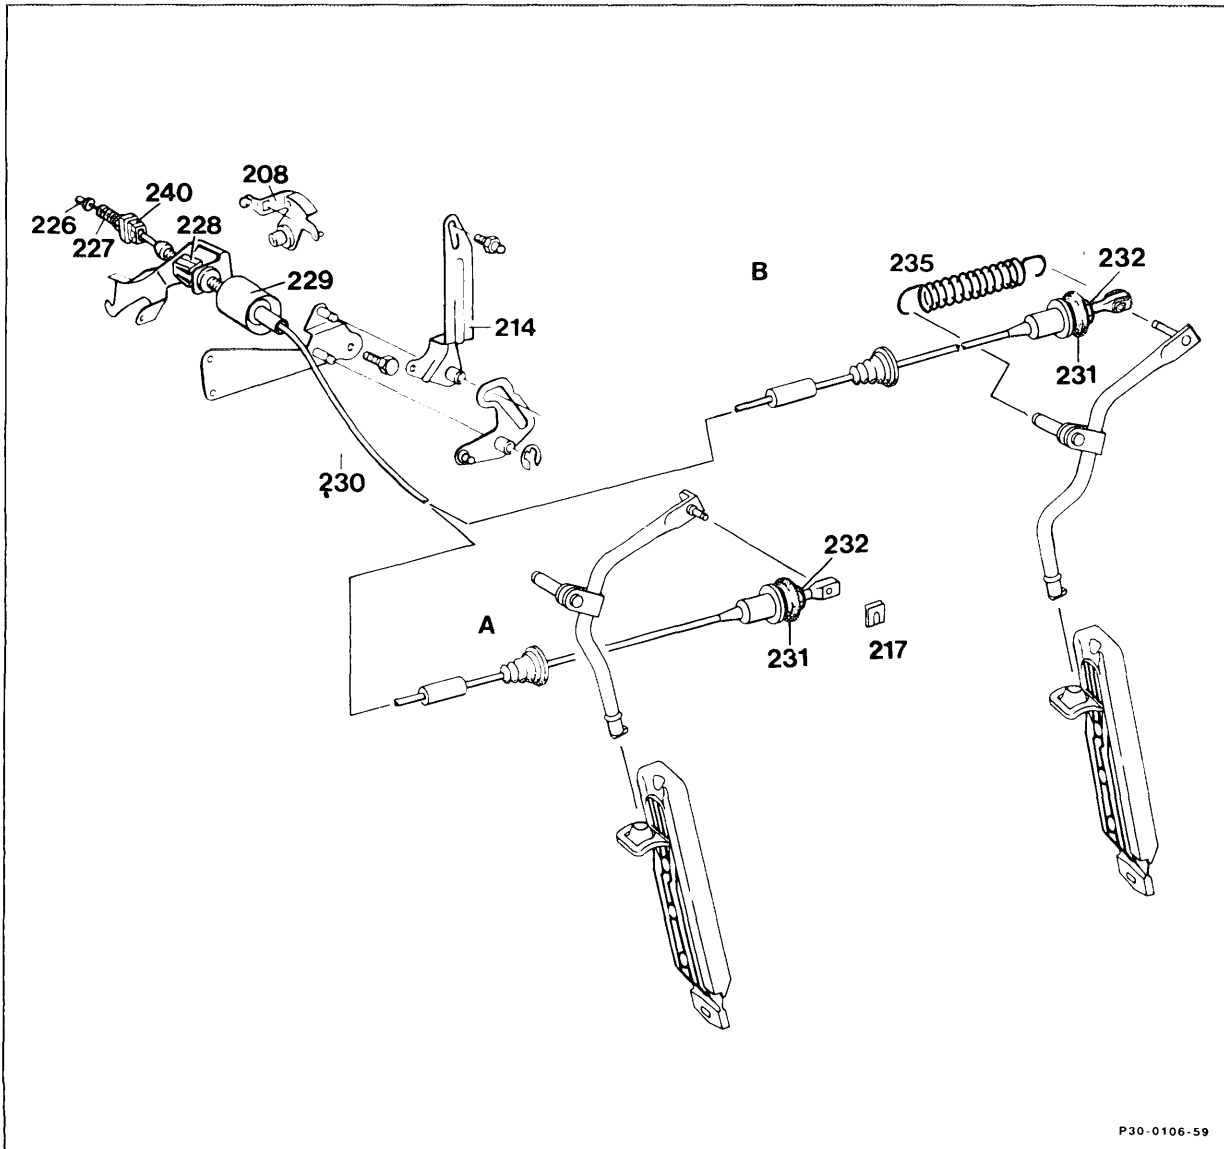

- A Model 201
- B Model 124

Bowden cable (230) detach at accelerator control lever (208).
 Remove, install guide piece (240) on accelerator
 control lever for this step.

Plastic clip (228) compress and remove, install Bowden cable
 (230).

Footwell covering	remove, install.
Locking element (217)	(Model 201 only) remove, install.
Spring (235)	remove, install.
Vacuum lines for key-operated engine stop	withdraw from rubber grommet, insert.
Bowden cable (230)	press outwards, ensuring that the rubber grommet (231) is not pressed out.
Adjusting screw (229)	adjust full throttle stop.
Adjusting nut (232)	adjust idle stop.
Rubber grommet (231)	ensure correct position.
Accelerator control	adjust (30-300).

Note

Use anti-corrosion grease
Part No. 000 989 87 51 10 when performing
assembly work on the accelerator control.