


30-330 Removal and Installation of accelerator pedal - Turbodiesel

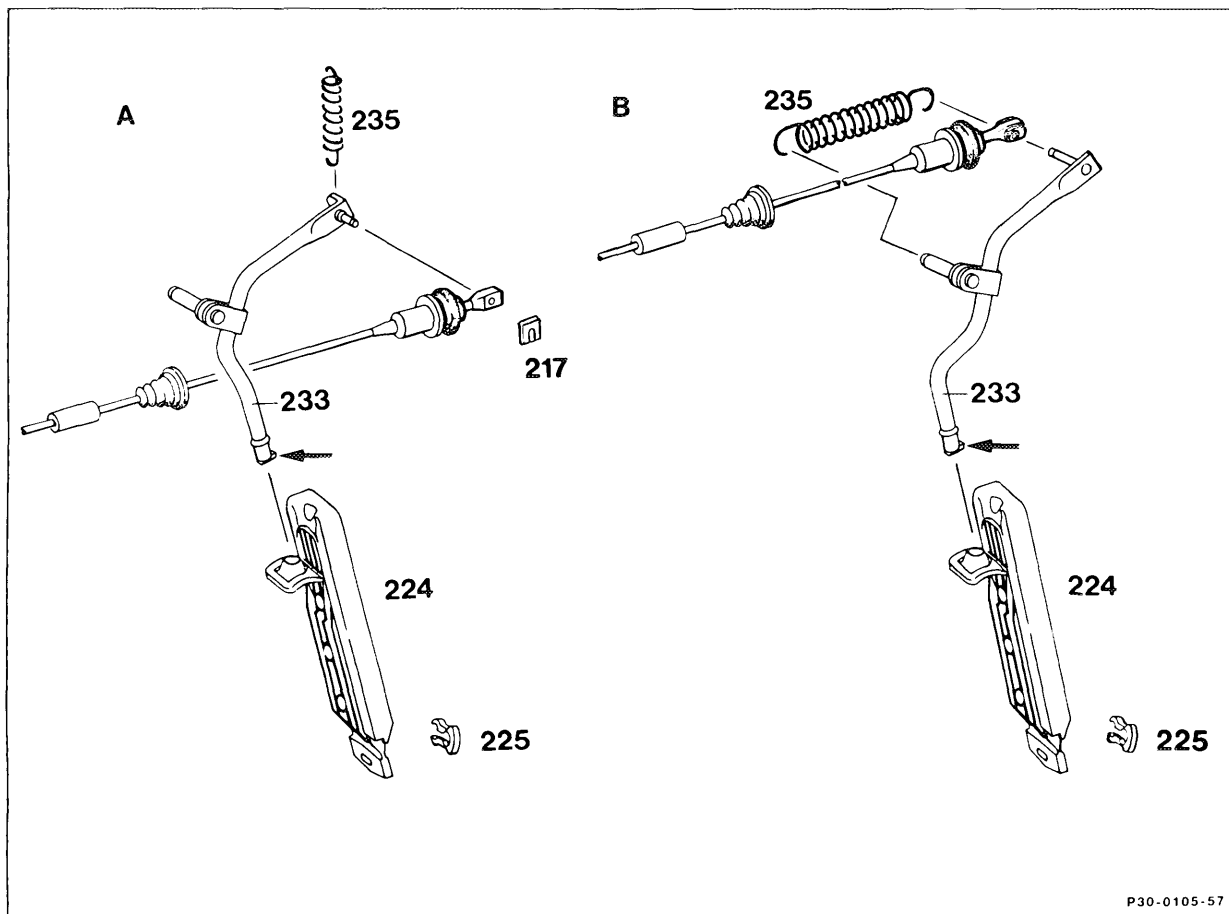

A Model 201
B Model 124

Expanding clip (225)	compress behind accelerator pedal and withdraw.
Accelerator pedal (224)	push upwards and turn through 180°, then withdraw downwards. This aligns the lug (arrow) on the accelerator pedal lever (233) with the slot in the accelerator pedal.
Accelerator pedal lever (233)	remove, install.
Return spring (235)	detach, attach.

Note

Removal and installation of the accelerator pedal on Model 126 is identical to that for Models 124 and 201. The link from the accelerator lever to the accelerator pedal is maintenance-free and does not need to be greased.