


01-2240 Checking for leaks at rear of engine

Preceding work:

Manual transmission: flywheel removed (03-4100) or two-mass flywheel removed (03-4620)

Automatic transmission: driven plate with ring gear removed (03-4100)

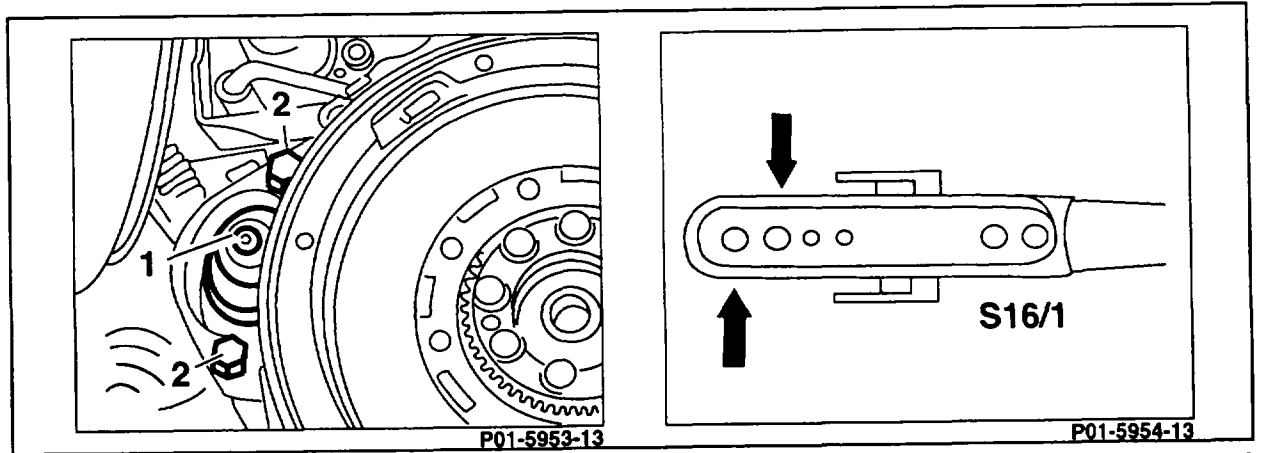

P01-5953-13

P01-5954-13

P01-5962-53

Rear of engine	clean
Dried surrounding area	spray with Mercedes-Benz white contrast spray, part no. 000 989 03 59
Oil level in engine	check, adjust to correct level (18-0020)
Manual transmission: flywheel	install (03-4100)
Manual transmission: two-mass flywheel	install (03-4620)
Automatic transmission: driven plate with ring gear	install (03-4100)
Starter (1)	bolt to crankcase with M10 × 60 hexagon bolts (2)
Engine	support at rear in installation position, secure
Automatic transmission: contacts (arrows) at starter lockout switch (S16/1)	bridge
Engine	start and check for leaks